


FIBARO Virtual device for iEASTstreamer

This document explains how to configure virtualdevice in Home center Lite. The purpose of this VD is to contrôle anyiEAST streamer through FIBARO Home Center Lite. Note that the communication is one way, requests are sent fromFibaro home Center Lite to iEASTdevice.


NB : Another virtual device with more advanced features are available for FIBARO Home Center 2

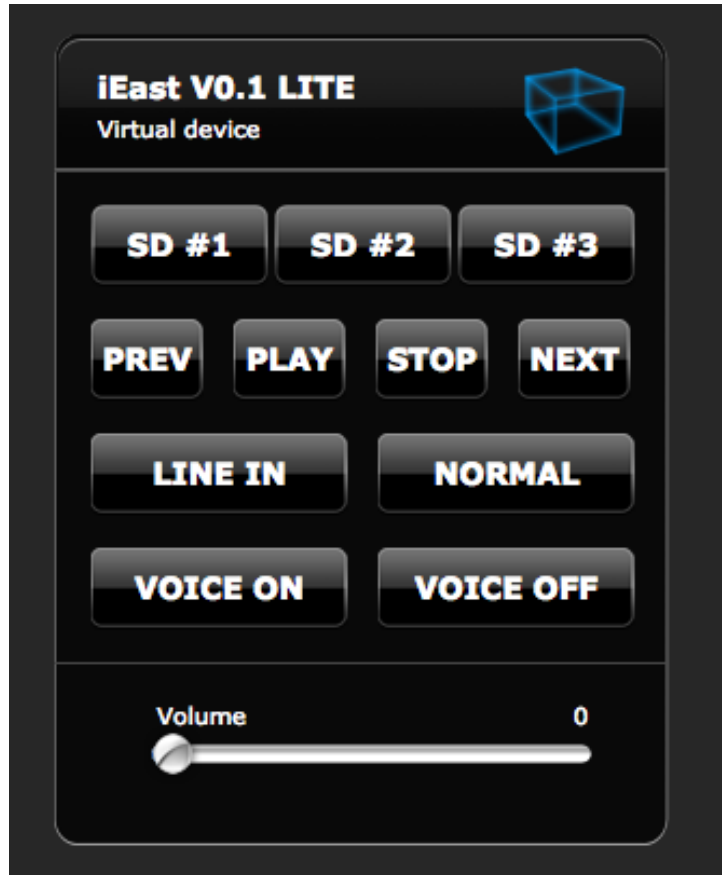

Installation :

To install the virtualdevice,

- 1 Go to « Add or removedevices » in Home center Lite interface
- 2 Uploadthe .vfib file in Virtual device section
- 3 Go to « advanced » section and change the IP address in everyButtonsyntaxfield
If youdon't know the IP adress of iEAST streamer go to paragraph 2

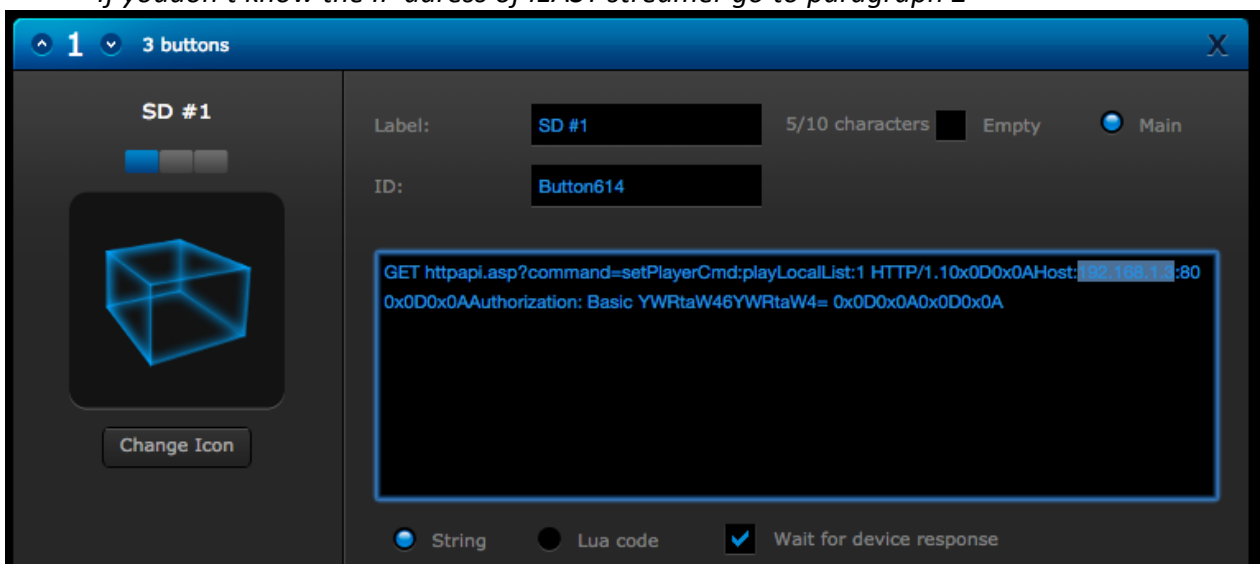

4 Click on « savebutton »

You can customise the VD with 128x128px icons

How to find iEAST IP address :

You have several methods to find the IP address of iEAST streamer :

Method 1 :

Connect to the same network as the one where iEAST streamer is connected.
Launch a local network scan (several local network scanner software exists)
You will find an IP address (eg : 192.168.1.12)

Method 2 :

When connected to your iEAST streamer from iEASTplayapp go to device list page
Click on « parameters » button then « speaker info »
The IP address is in the IP field